
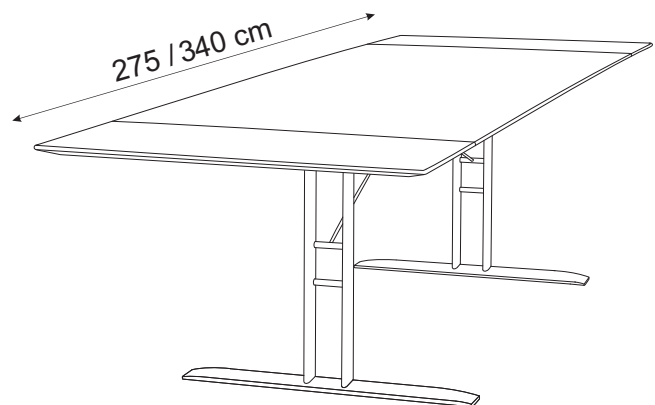
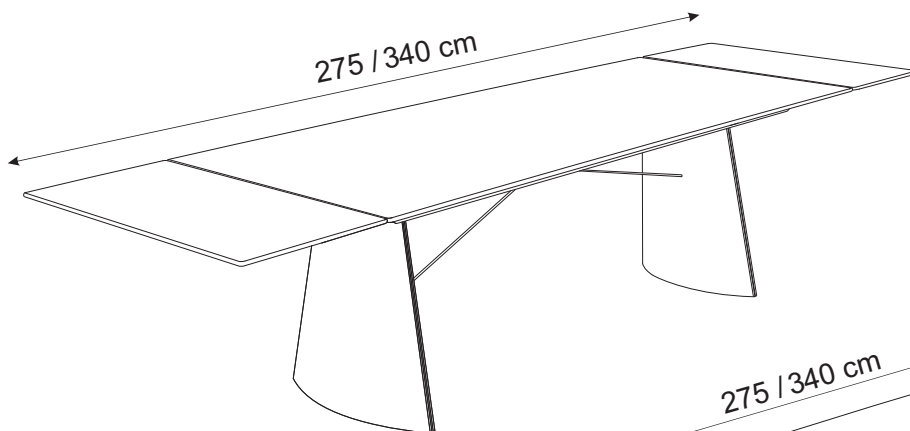


Collum / Malli


extension

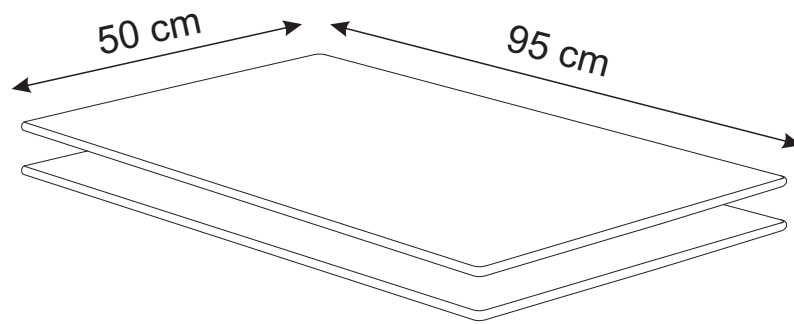

PBJ
DESIGNHOUSE
1968

A


M5x12

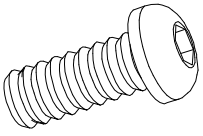


16

B


3 mm




1

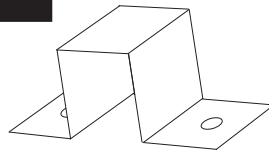C


8

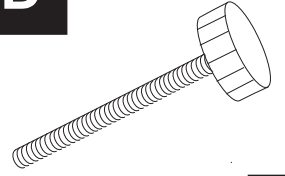D




4

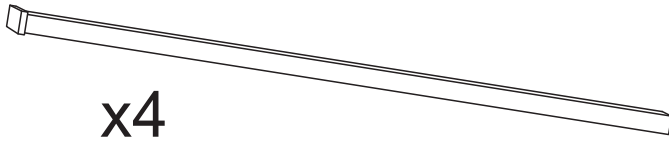


x4

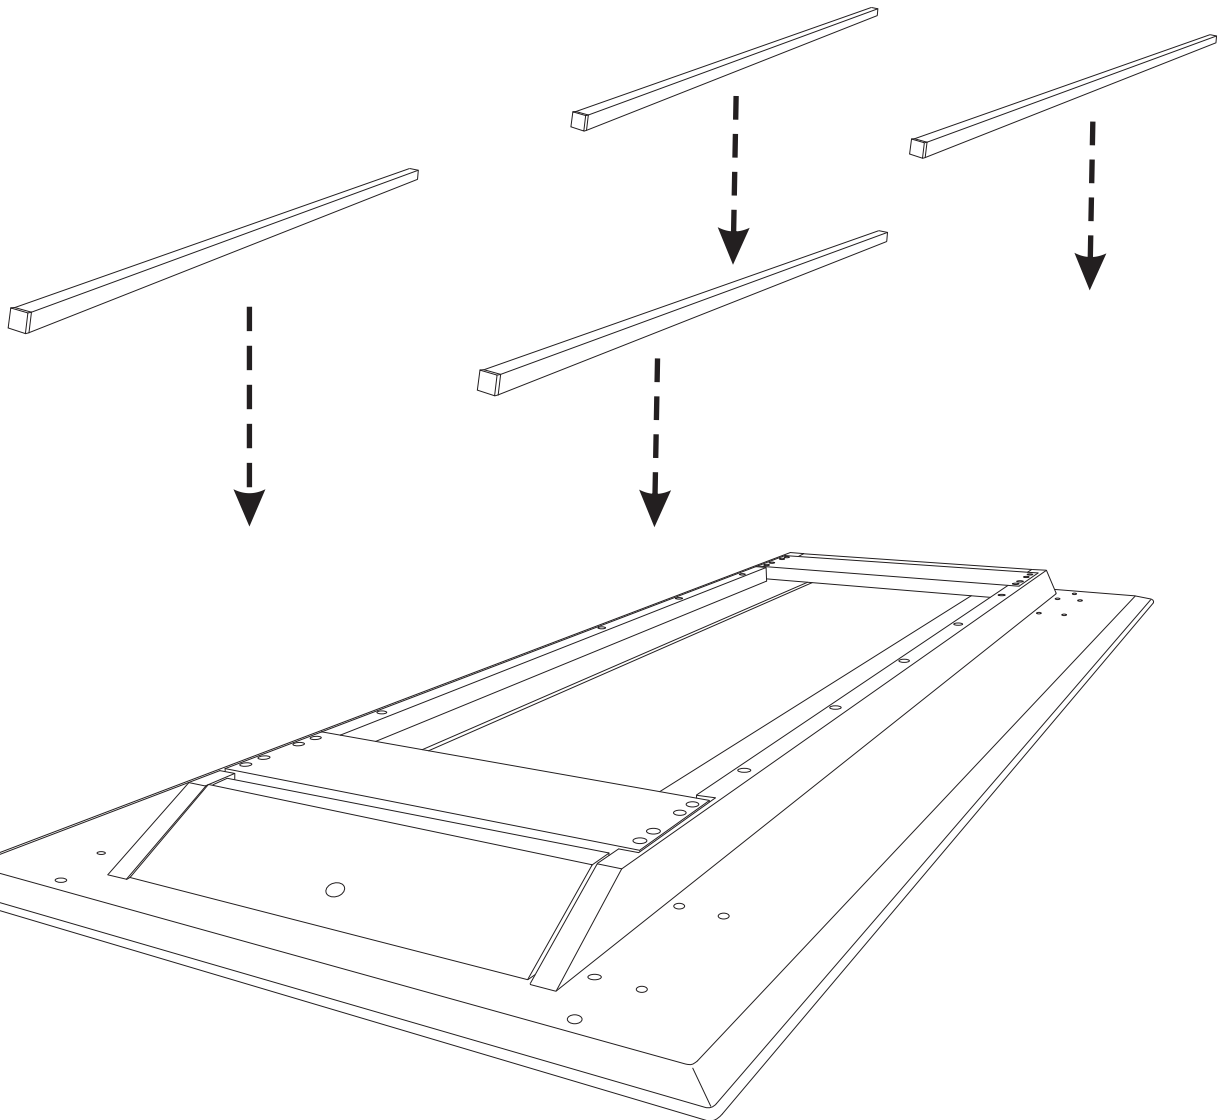
1

2

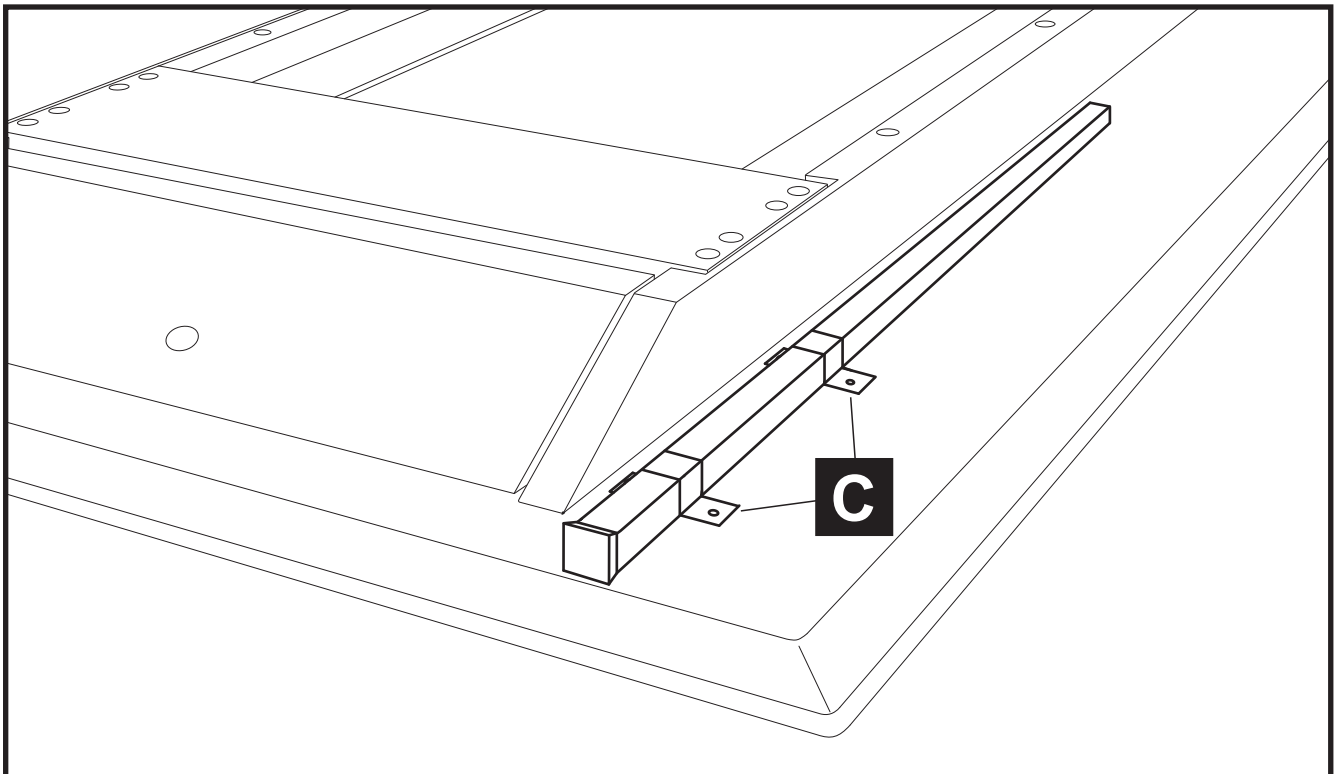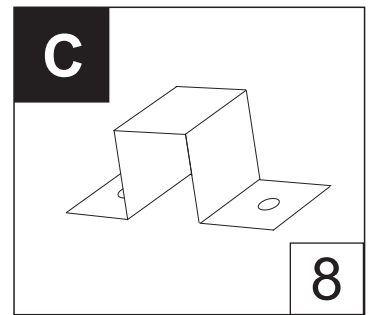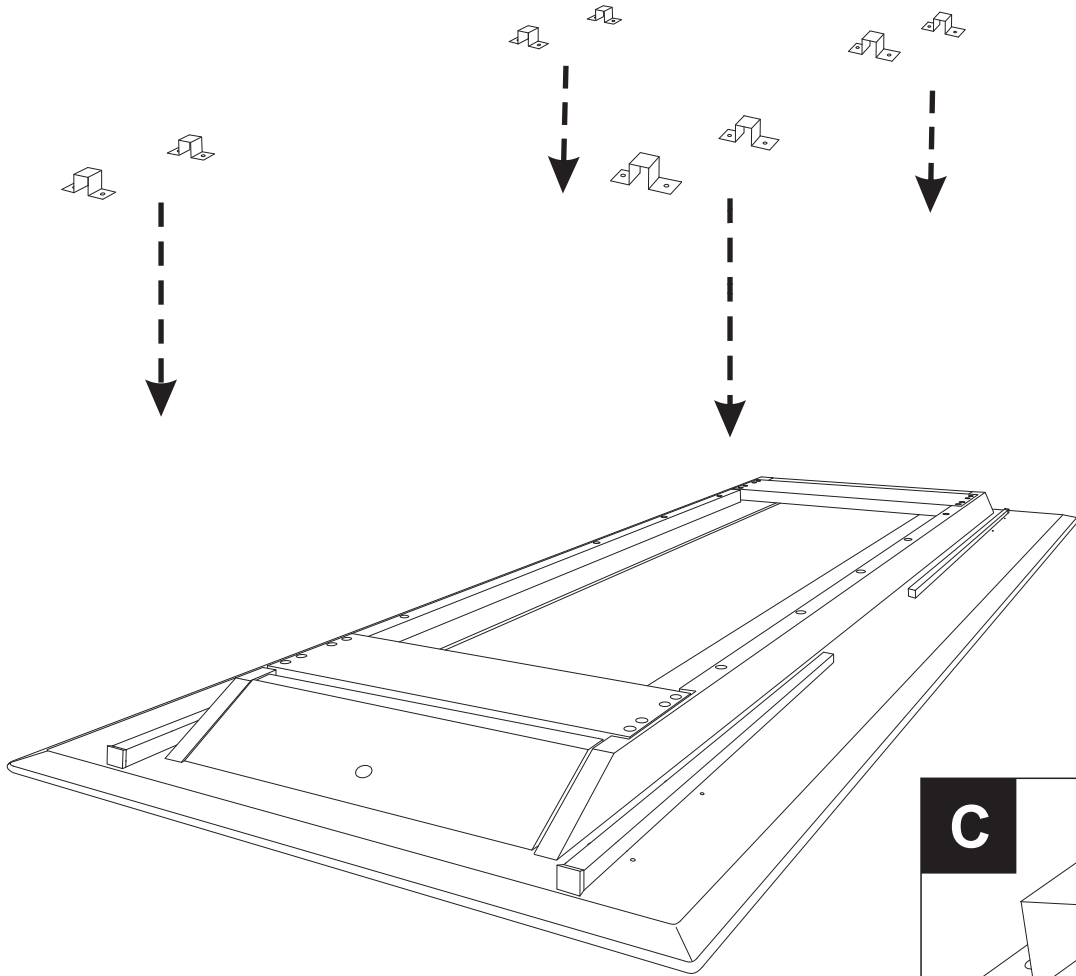

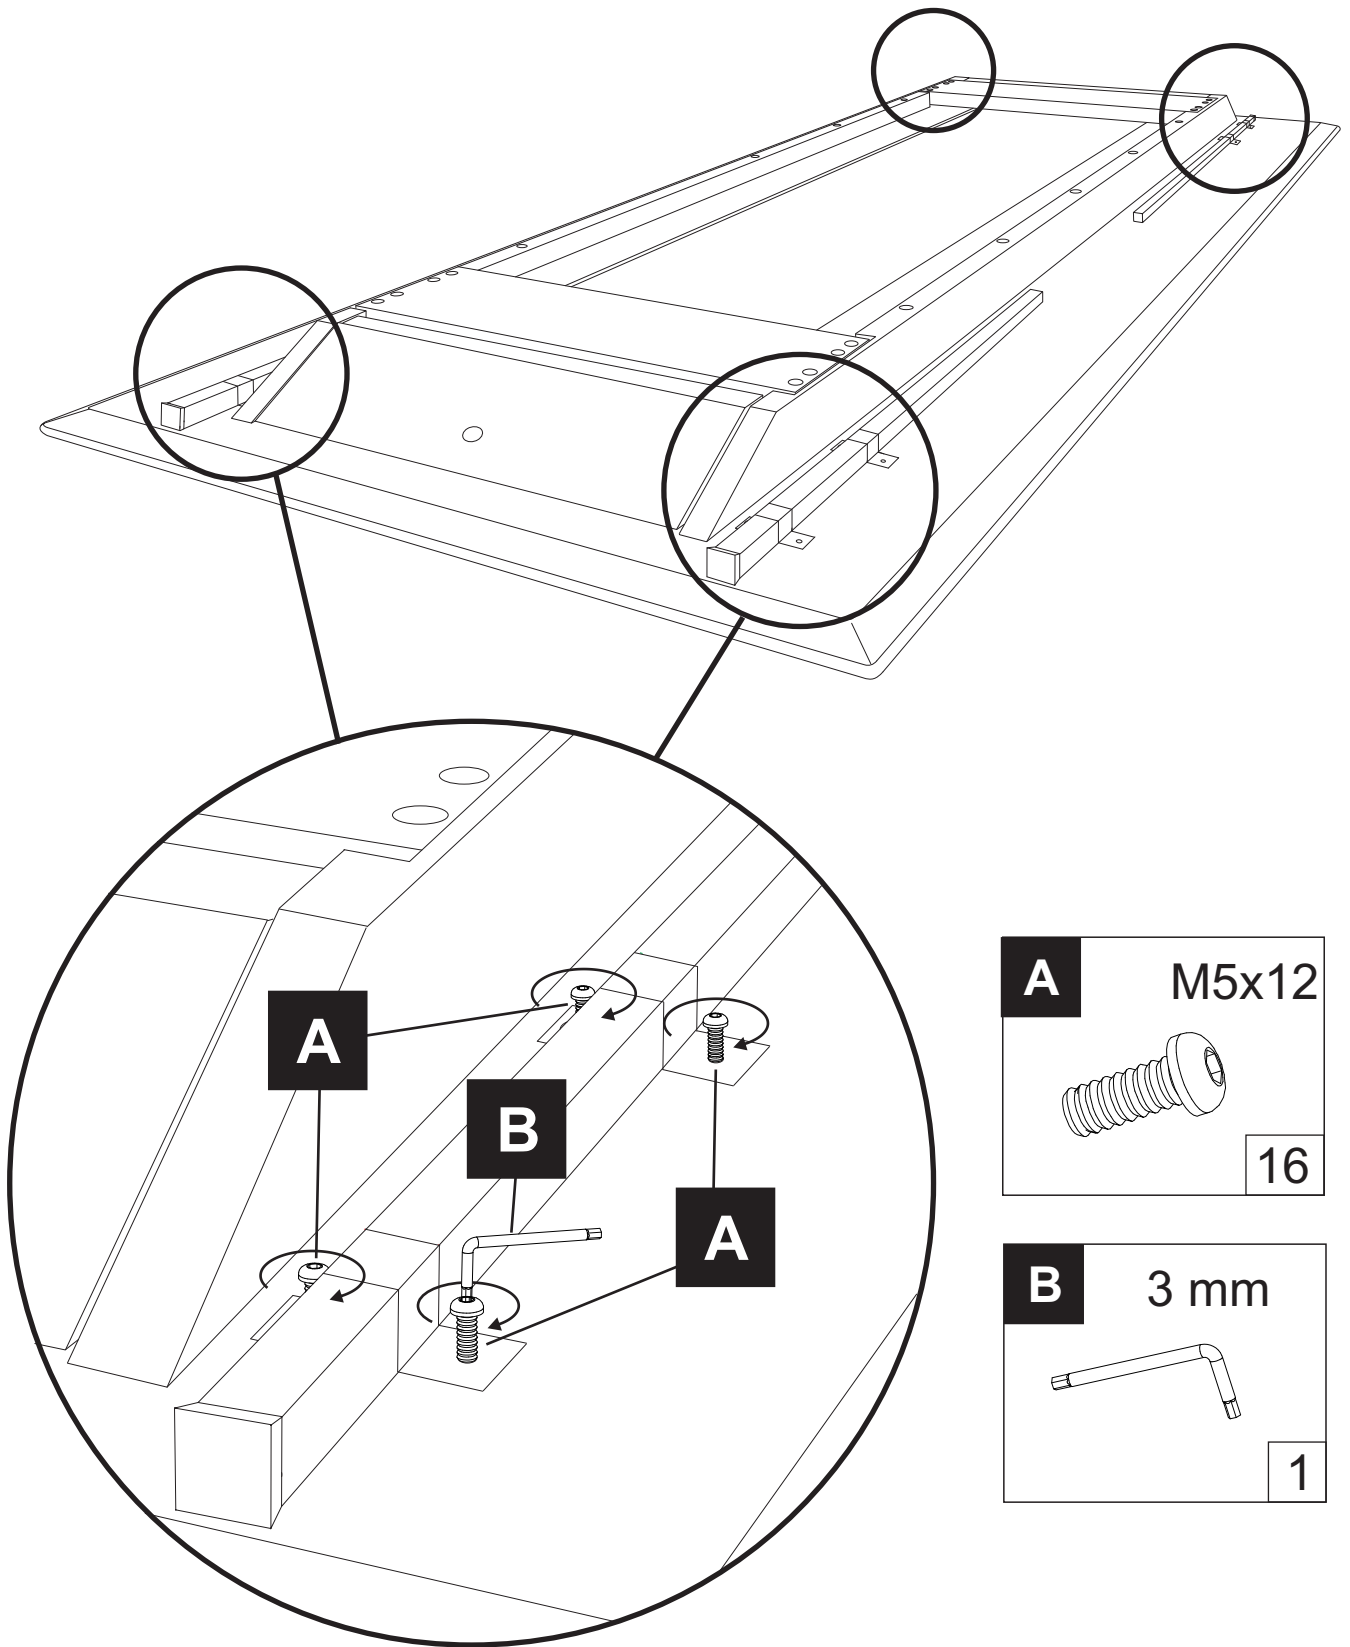


A M5x12






16

B 3 mm




1

4

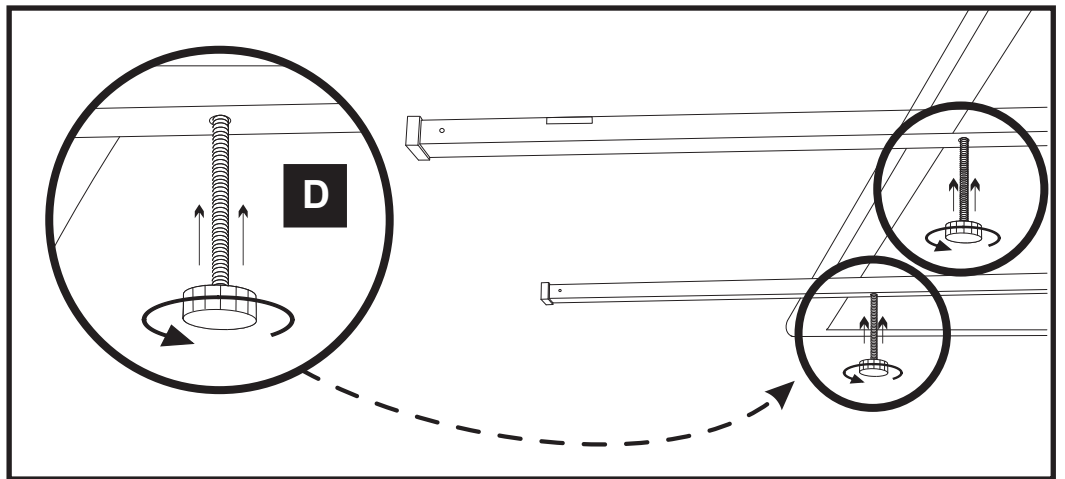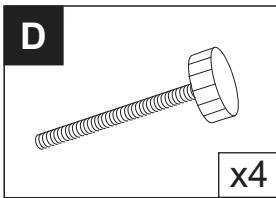
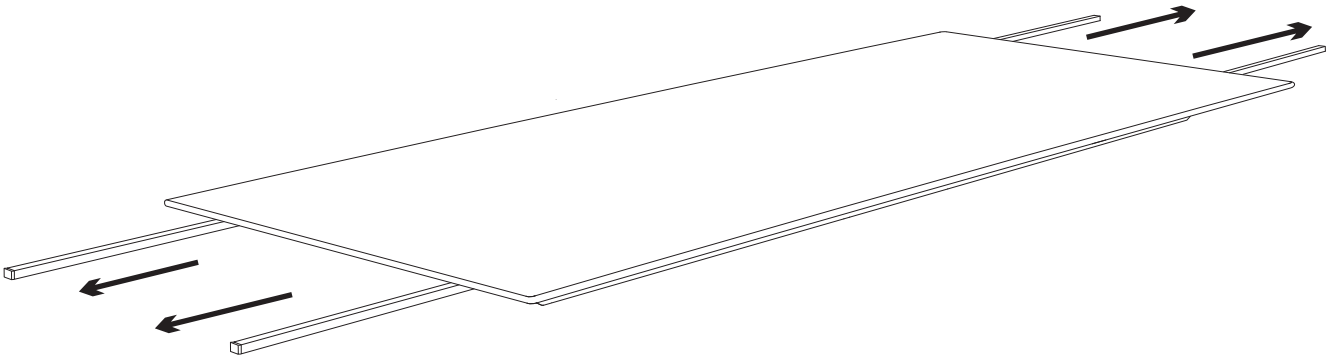


5

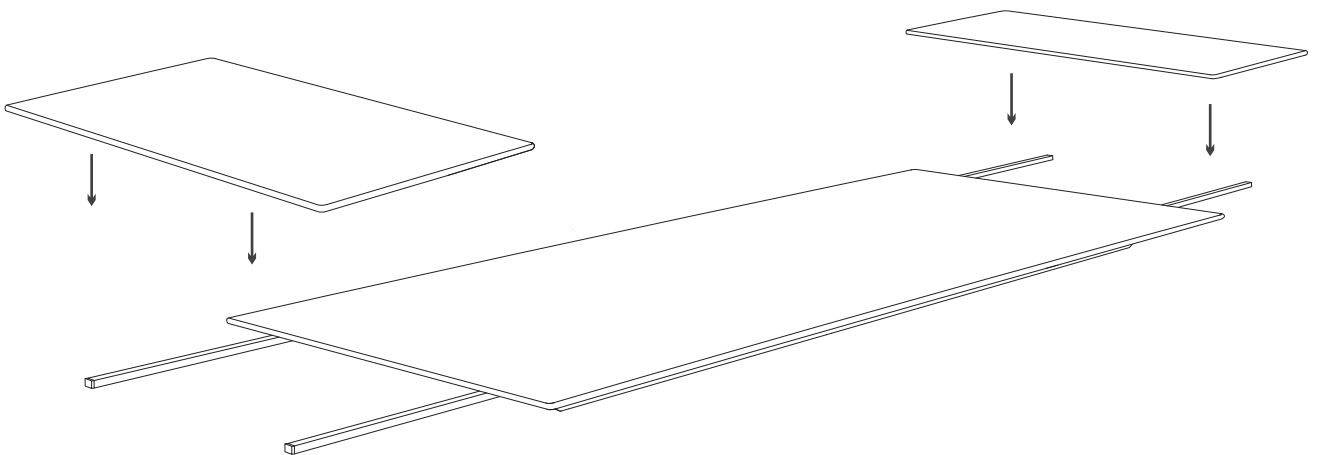


5

6

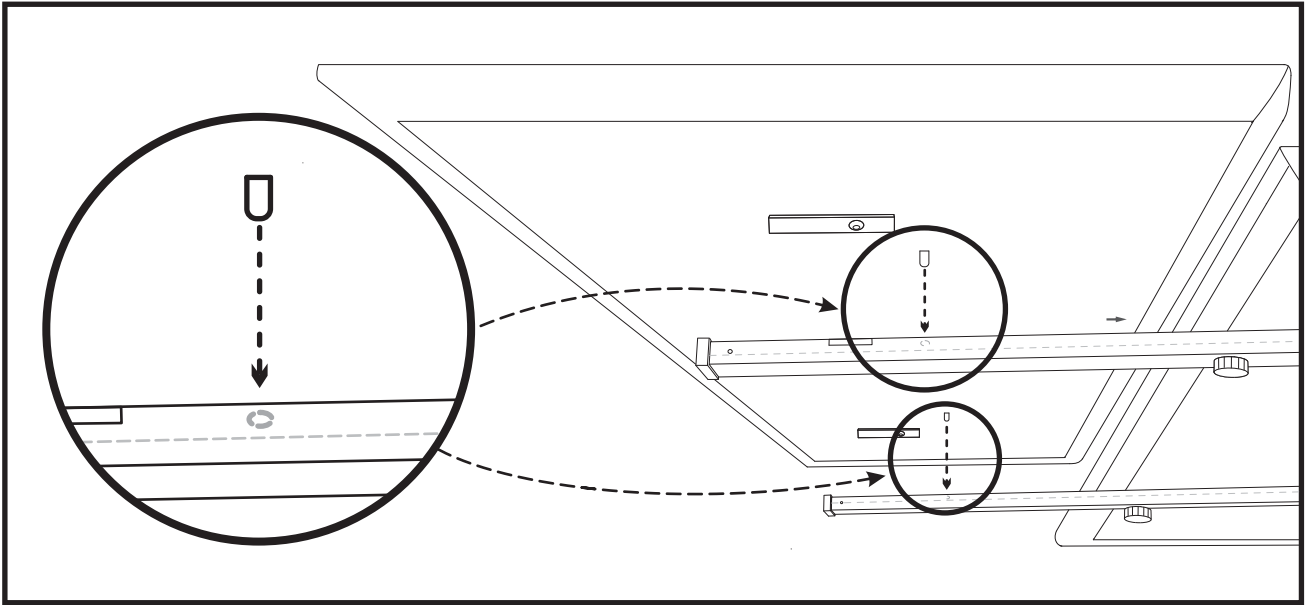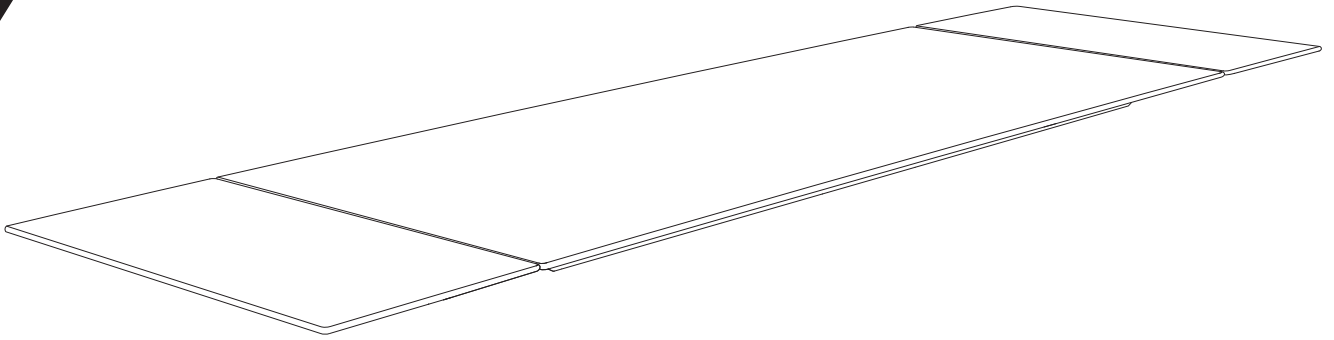

7

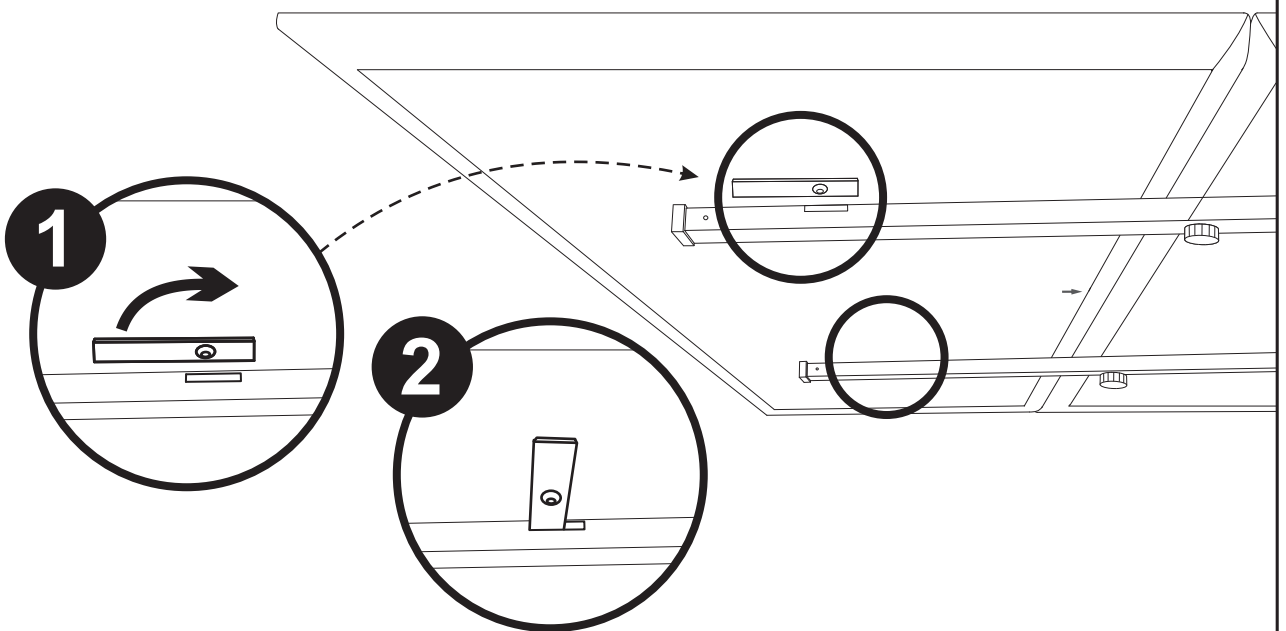

6